


Preparation

1. 3G/WCDMA Mobile Operator Service
2. format 2GB+ Micro SD card
3. computer(Vista, Windows 7, windows 8 system)
4. One SIM card without PIN lock
5. The SIM card should be able to send images via 3G/WCDMA/ GPRS/MMS network
6. 6V power(4 or 8 AA Batteries, or 6V input power supply)
7. MMSCONFIG Program in CD
8. Users need to ask the provider 3G MMS data (APN+Account+Password, MMSC+IP+PORT),or find this info on providers homepage.
9. 3G GPRS data for SMTP setting from provider (APN+Account+Password)
10. Sender Email server info(server+port+email+password)

MMS Setting Steps

1. Insert card and SIM to camera,put batteries in cam, screw antenna to it then turn camera to test mode,check there are signal bar and operator name on the camera screen. Then connect the camera to the PC with the included USB cable

insert CD to computer, open and then double click  MMSCONFIG

2. Choose Mode Camera or Mode Camera & Video in Menu , Go to MMS table, select MMS MODE Manual


3. Insert Gprs Setting and Server Setting

4. Fill in Phone Setting Phone1 and or Email Setting Email1

5. Go to SMTP ,choose Smtip Setting SMTP ON/OFF OFF

6. Click Save button and save as Parameter.dat to TF card

7. Plug USB cable from camera


8. Go to  in camera menu, check the subsetting is

the same with above setting

9. Turn camera to on mode

GPRS Setting Steps


1. Insert card and SIM to camera, put batteries in cam, screw antenna to it then turn camera to test mode, check there are signal bar and "SIM" on the camera screen. Then connect the camera to the PC with the included USB cable

insert CD to computer, open and then double click  MMSCONFIG


2. Choose **Mode** **Camera** or **Mode** **Camera & Video**,

Go to **SMTP** table, select **SMTP MODE** **Manual**


3. Insert all

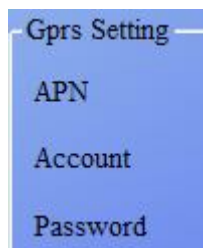


4. Fill in sender email info in

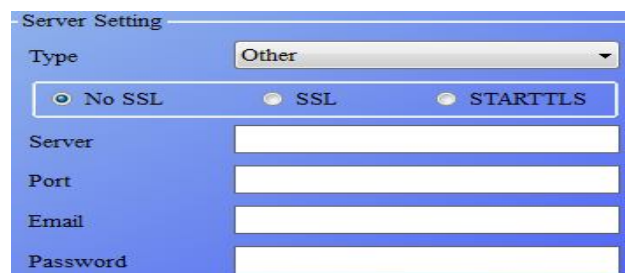

and

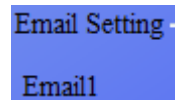


5. Go to **MMS** table, choose

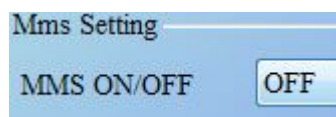

6. Click **Save** button and save as **Parameter.dat** to TF card

7. Plug USB cable from camera

8. Go to

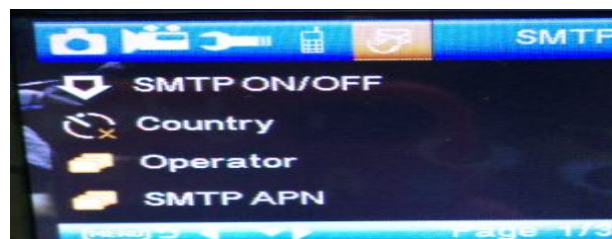

in cam menu, check the

subsetting is the same with above setting

9. Turn camera to on mode

SMS Command List

MMS/SMTP need to be set 'on' mode before using these sms command

1. *500* take picture

(can work in both mms and smtp mode)

SIM in camera will send [Capture](#) when receive *500* command

2. *505* take picture and send to the mobile who sends sms

sim in camera will send [Start capturing..](#) and still send picture to inserted Mobile ID and/or email when got *505* Command, no matter MMS or smtp mode.

But sim will send images via MMS to the mobile who sends SMS when camera [only in MMS mode](#)

3. *520* check the picture quantity and battery status

(can work in both MMS and SMTP mode)

SIM will send [Total Jpg: Free Space: Battery Level:](#) when receive *520* command

4. *530* turn on sensor

(can work in both MMS and SMTP mode)

SIM will send [Start OK](#) when receive *530* command

5. *531* turn sensor to sleeping mode

(can work in both MMS and SMTP mode)

SIM will send [Stop OK](#) when receive *531* command